

# HOW TO START A **Tropical** SHIPPING REFRIGERATED CONTAINER

INSTRUCTIONS FOR **Carrier** BRAND EQUIPMENT

# 1



**Start the Genset.** Move both the Glow Plug (preheat switch) and the ignition levers up to the RUN position. Hold the levers up until the unit starts, then release the levers.

# 2



**Start the Refrigerated Container.** With the generator running, turn the refrigerated container power switch to the ON position. All units are preset to 0 degrees Fahrenheit. Please see reverse side for instructions on how to change the temperature setting.

## Tropical

For further assistance, call one of the following telephone numbers.

**Business Hours**  
561-840-2949

**After Hours**  
561-762-4266  
561-373-4479  
561-307-6638  
561-373-0878

[www.tropical.com](http://www.tropical.com)

See reverse side for  
**HOW TO SET OR CHANGE THE TEMPERATURE SETTING.**

© 2006 Copyright of Tropical Shipping and Construction Company Limited. Tropical Shipping and its logo are trademarks of Tropical Shipping and Construction Company Limited PPB1401-1106-A-00

## Tropical SHIPPING **HELPFUL HINTS**

### HOW TO SET OR CHANGE THE TEMPERATURE SETTING

# 1

Check to make sure that the genset (generator) is running.

# 2

To increase the temperature press and hold the UP arrow until desired temperature is reached.

To decrease the temperature press and hold the DOWN arrow until desired temperature is reached.

# 3

Press ENTER.

**REMEMBER THAT YOU MUST PRESS THE ENTER BUTTON TO SET THE TEMPERATURE.**

#### HOW TO READ THE TEMPERATURE DISPLAY



3.5 (three and one-half) degrees Fahrenheit reads: 3.5F

30.5 (thirty and one-half) degrees Fahrenheit reads: 30.5F

3 (three) degrees Fahrenheit reads: 3.0F

30 (thirty) degrees Fahrenheit reads: 30.0F



The genset (generator) is located *beneath* the refrigerated container. The genset control panel is on the right.

The power panel for the refrigerated container is *on the front end* of the container.

You can view the temperature in Celsius by pressing the C/F button directly below the DOWN arrow, but the temperature is set, stored and displayed in Fahrenheit.

